

CULTIVATION SYSTEM DEVELOPMENT PH.4 COURSE

4

APPENDIX

First edition




Bright Eyes Academy

TABLE OF CONTENTS


- Set up the UART interface
- Install the UART library for the Python

1. SET UP THE UART INTERFACE

UART interface activation procedure

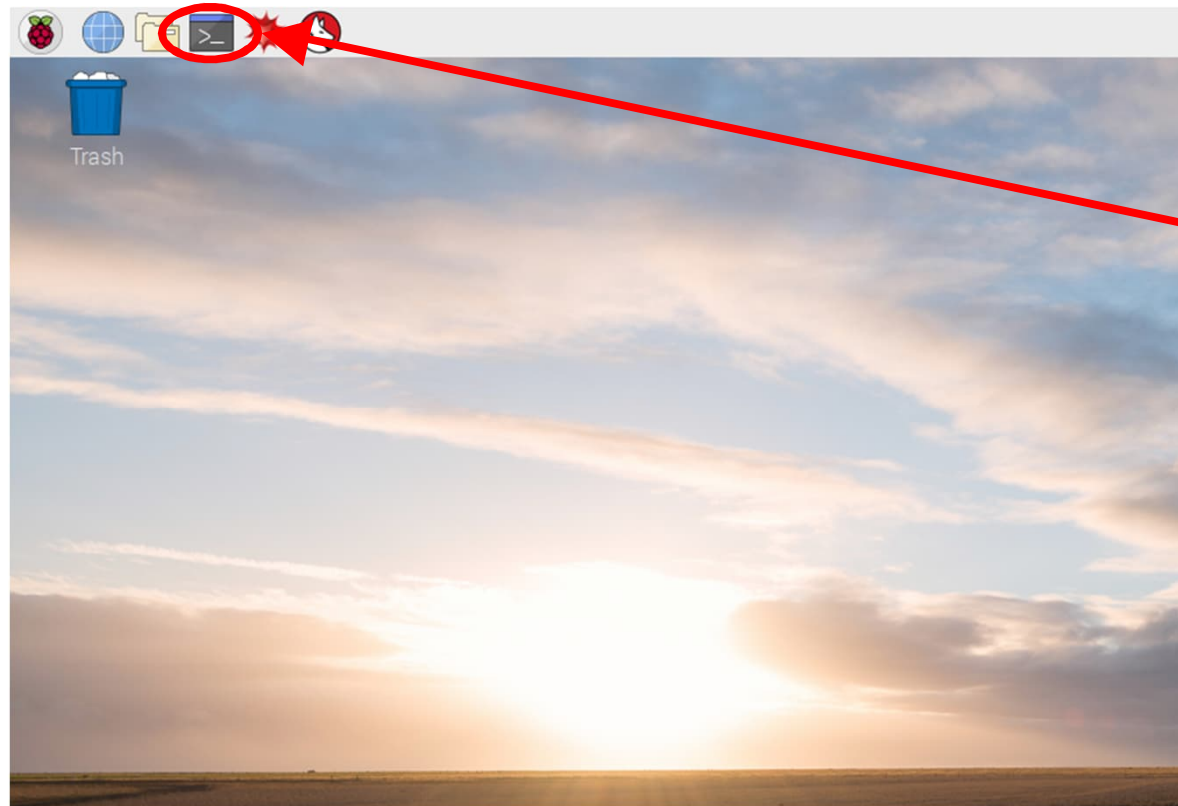


Open the terminal.

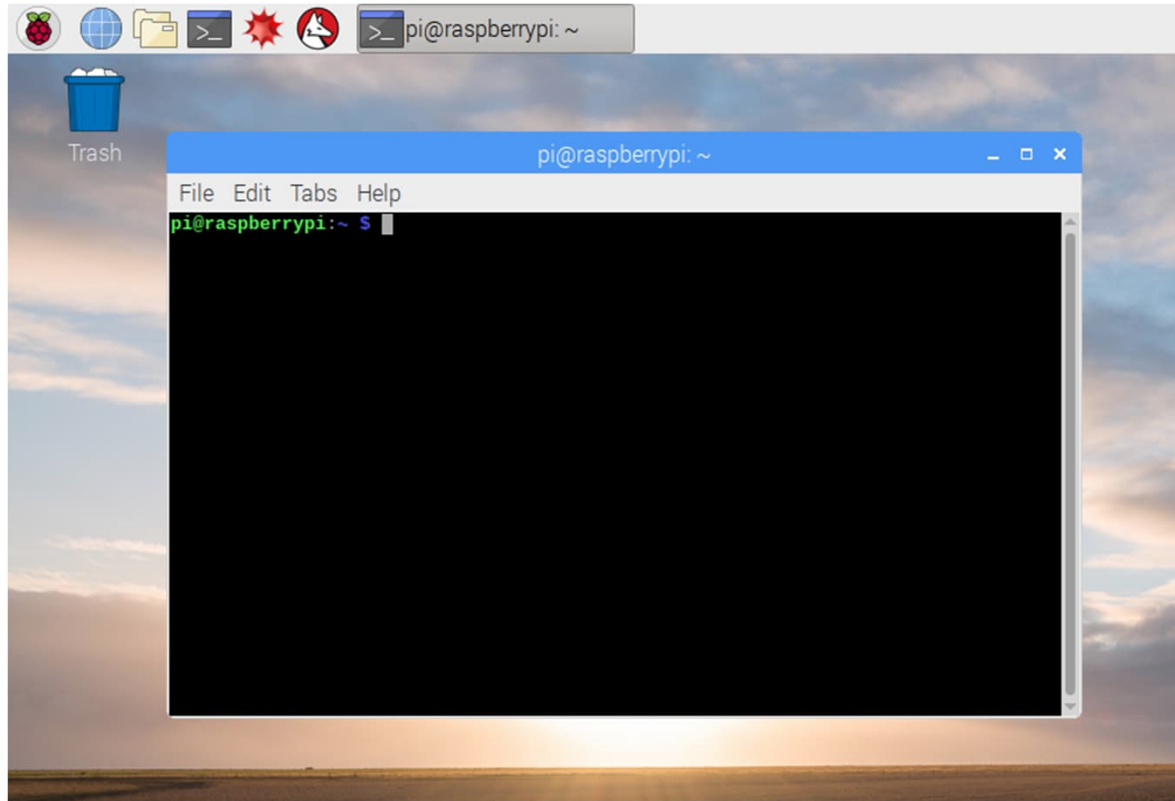


Type “sudo raspi-config” and press Enter.


```
pi@raspberrypi:~ $  
pi@raspberrypi:~ $ sudo raspi-config
```

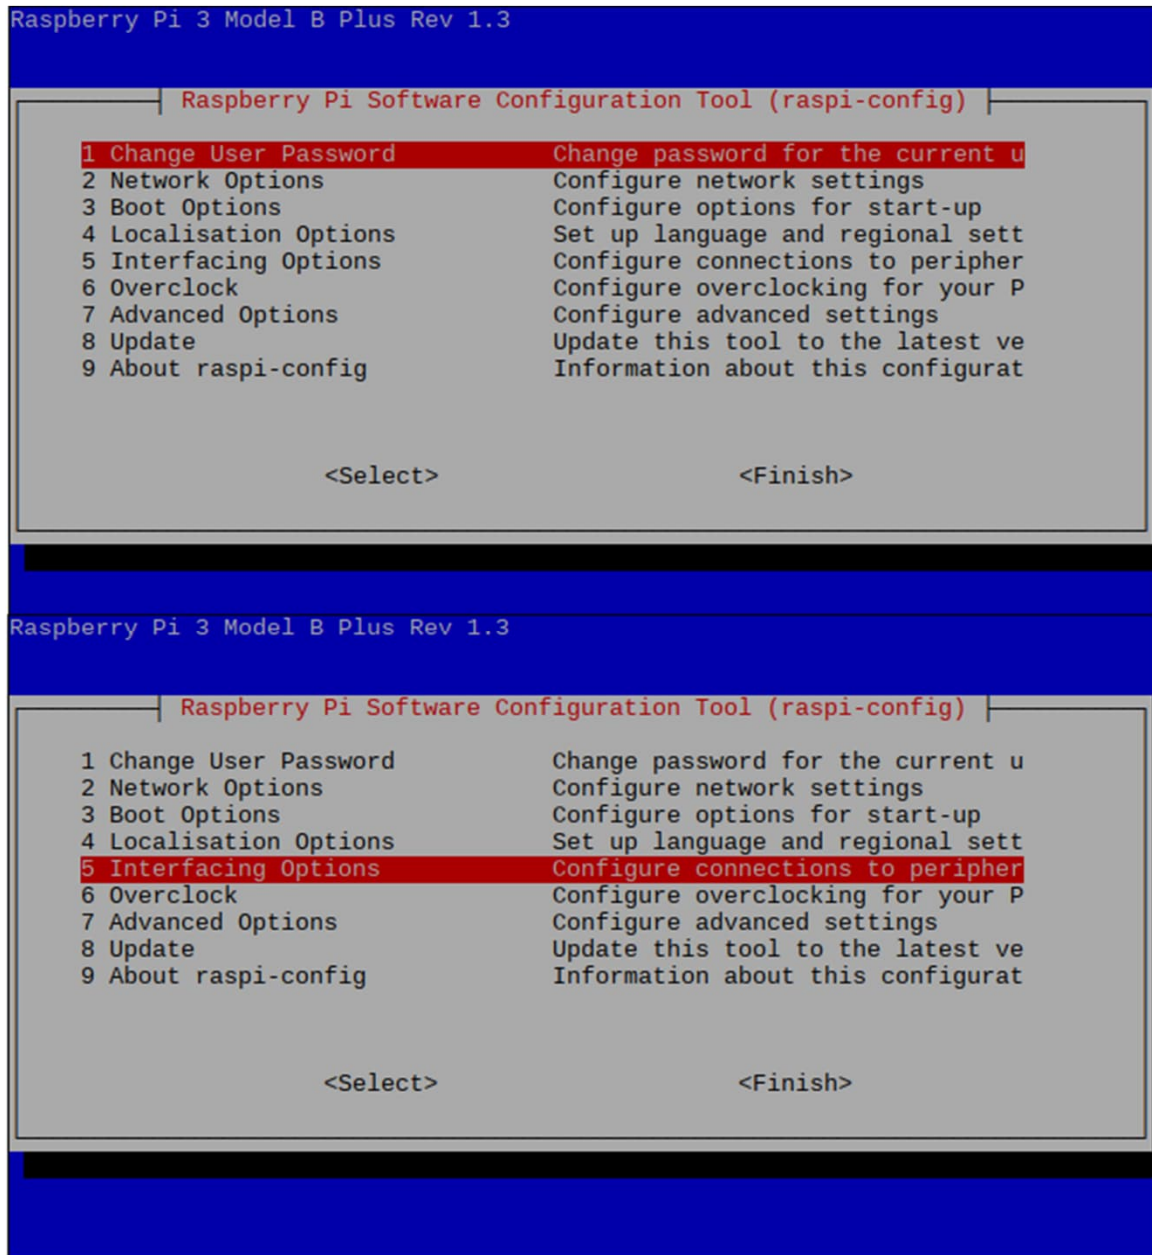

Select 5 Interfacing Options

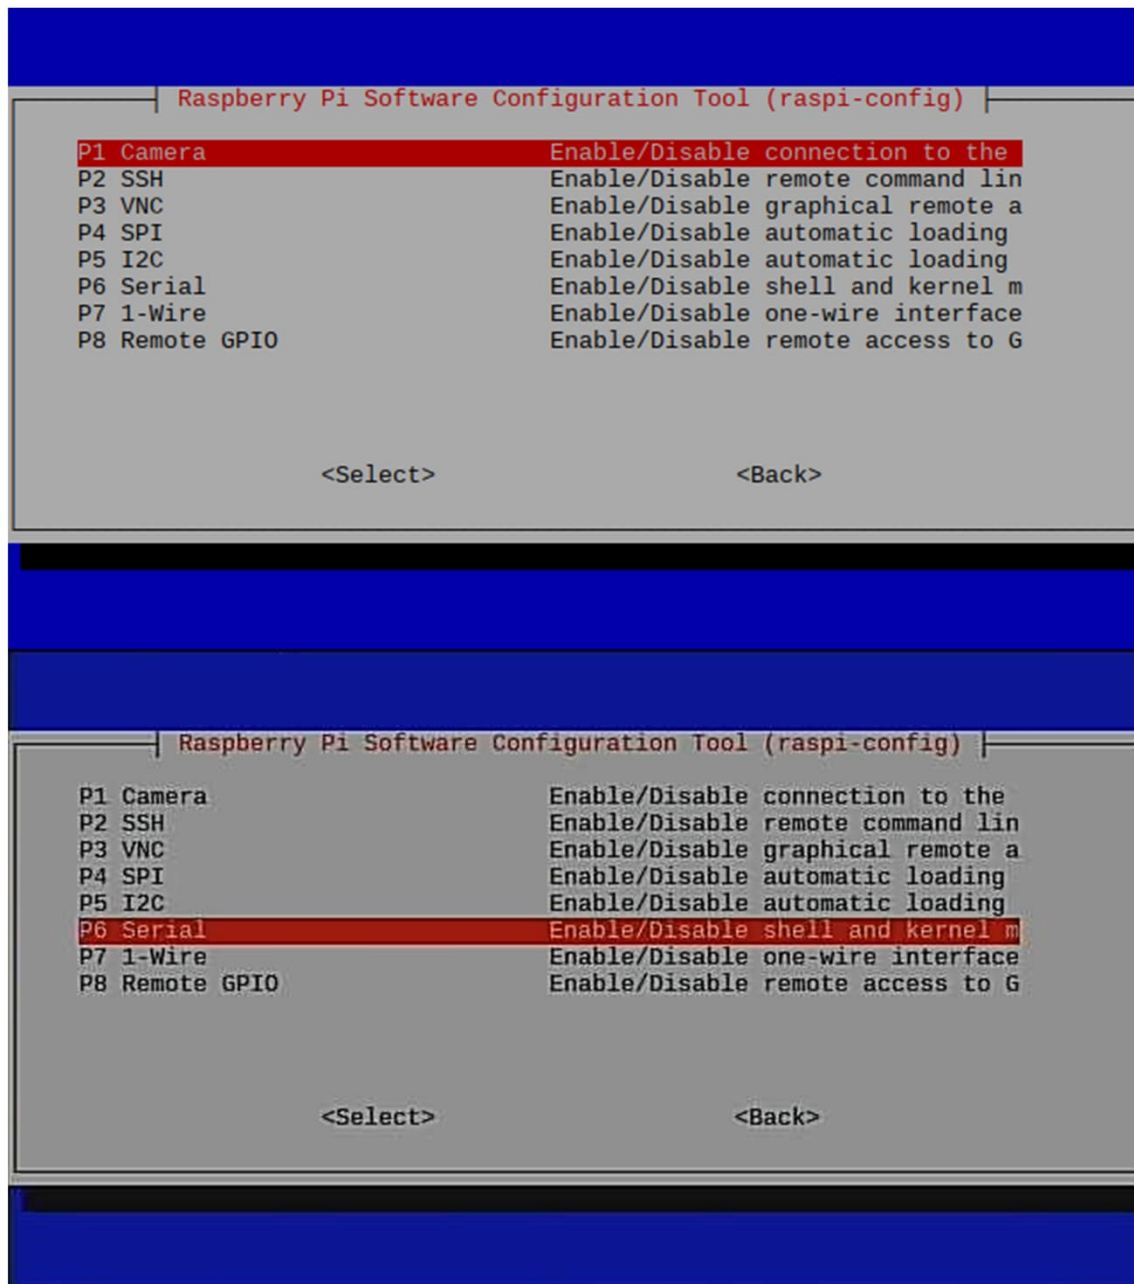


Select P6 Serial

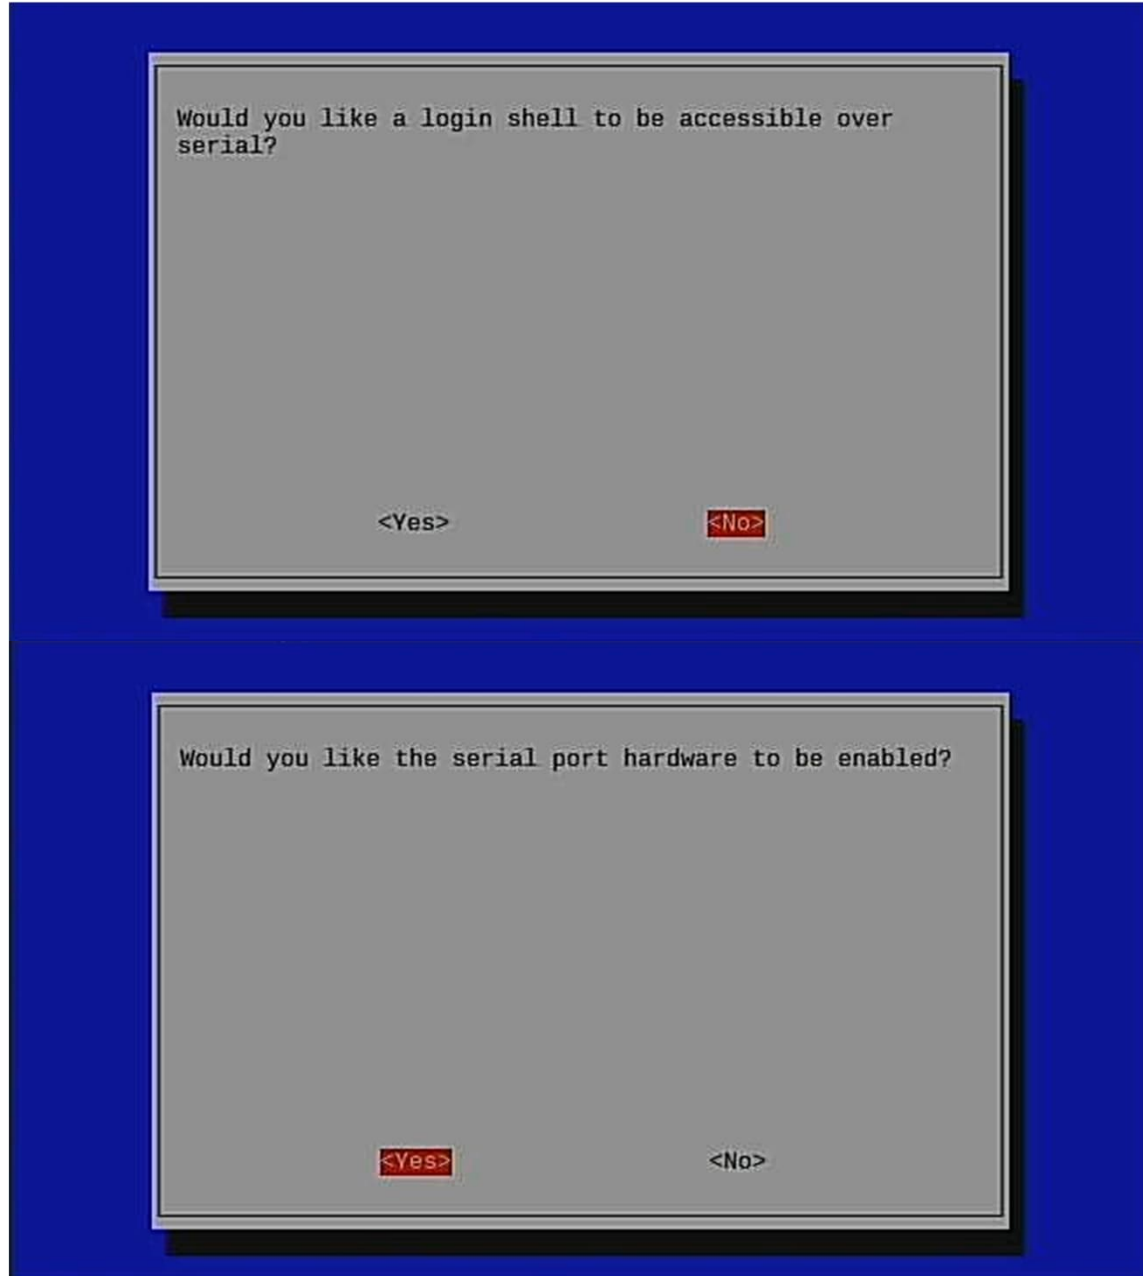


Select <No>

Select <Yes>

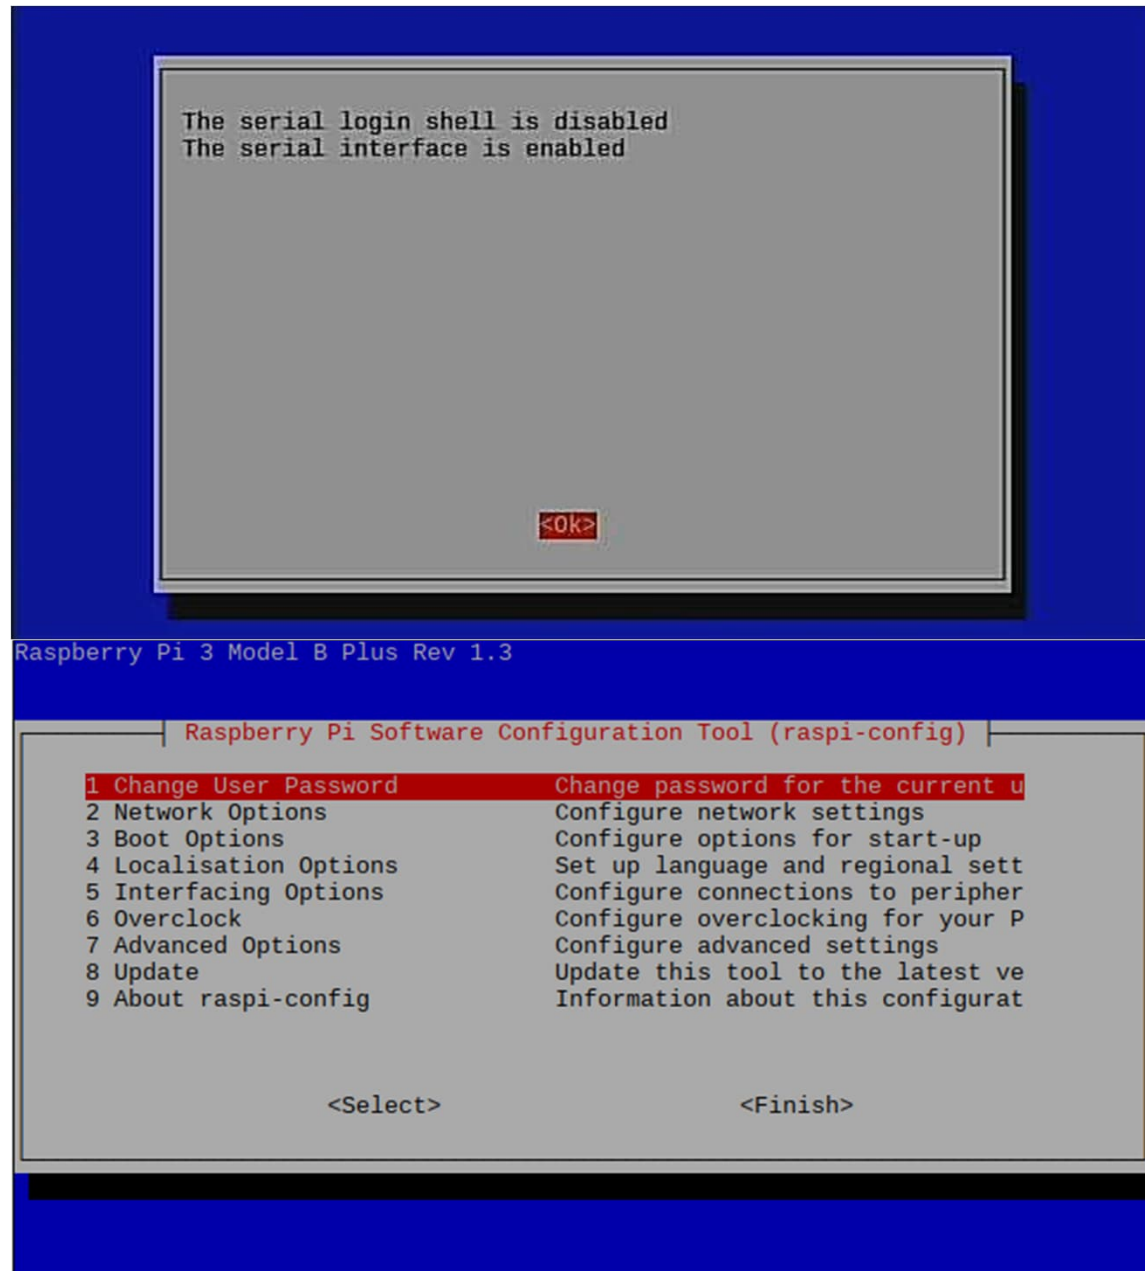

Select <Ok>

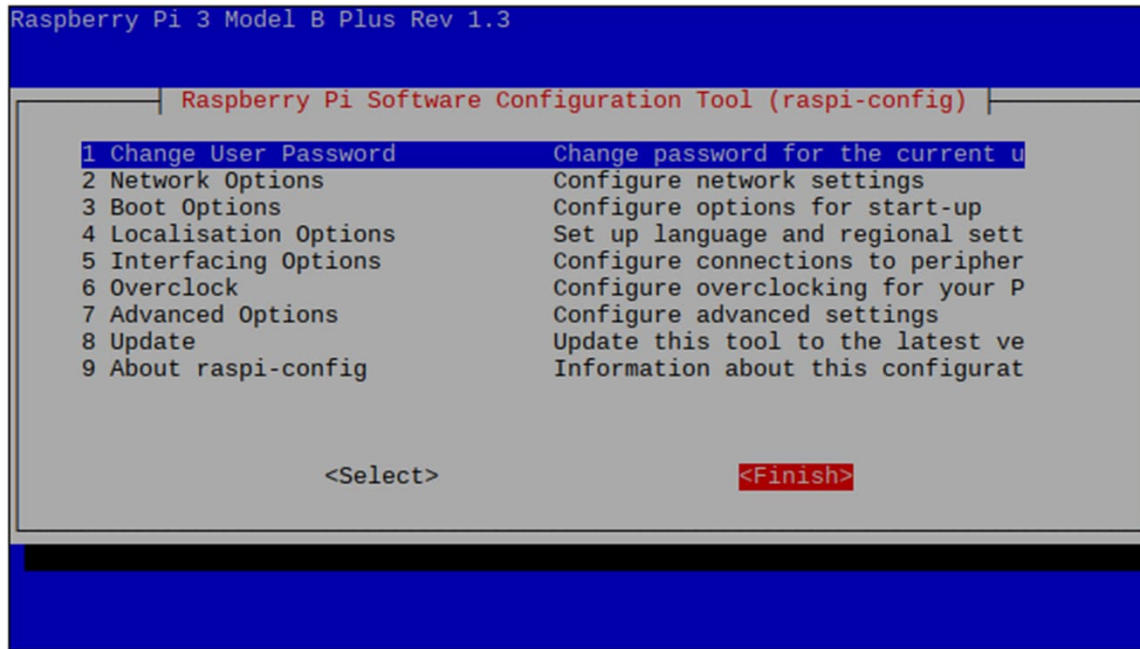

Select <Finish> with the TAB.


Type "sudo reboot" and press Enter.

```
pi@raspberrypi:~ $
pi@raspberrypi:~ $ sudo raspi-config
pi@raspberrypi:~ $
pi@raspberrypi:~ $ sudo reboot
```

Setting completed.

2. INSTALL THE UART LIBRARY FOR THE PYTHON

Library Installation procedure

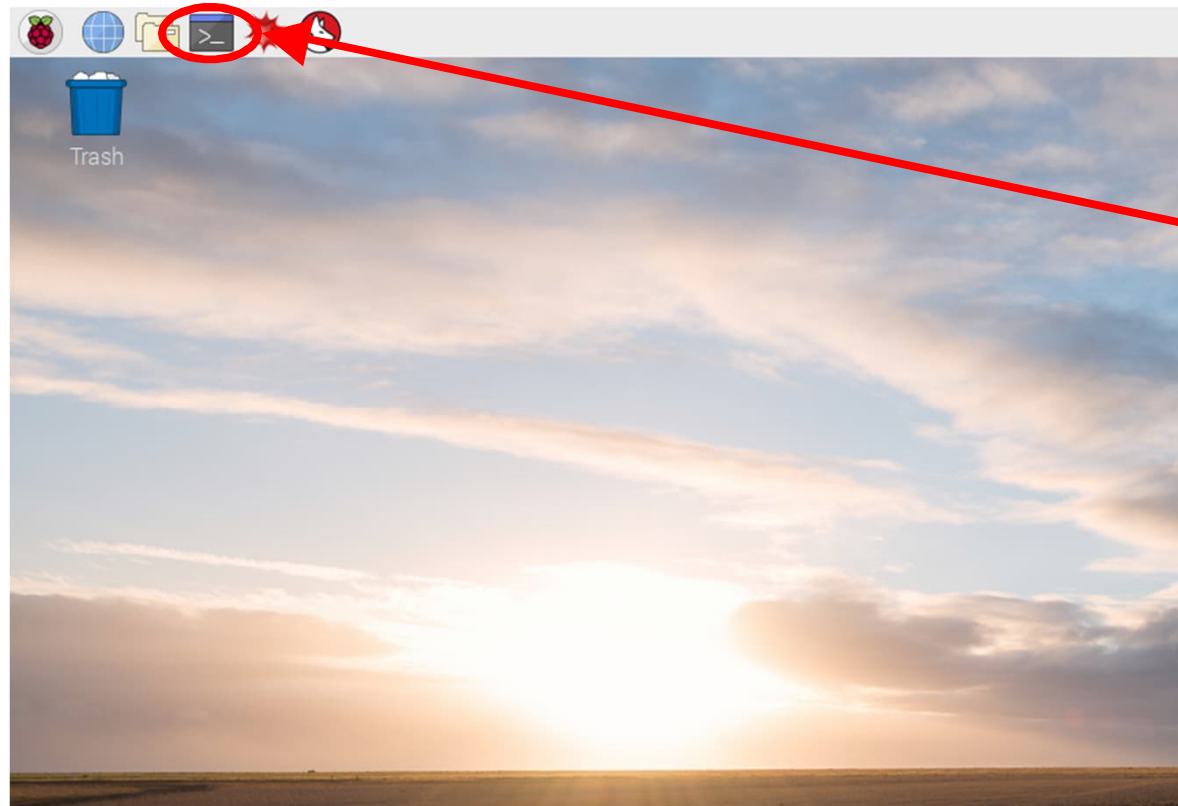

Open the terminal.

```
File Edit Tabs Help
```

```
pi@raspberrypi:~ $ sudo apt update
```

Update system package list

Type "sudo apt update" and press Enter.

```
File Edit Tabs Help
```

```
pi@raspberrypi:~ $ sudo apt upgrade
```

Upgrade all installed packages to the latest version

Type "sudo apt upgrade" and press Enter.

```
File Edit Tabs Help
```

```
pi@raspberrypi:~ $ sudo apt clean
```

Clear package cache

Type "sudo apt clean" and press Enter.

```
File Edit Tabs Help
```

```
pi@raspberrypi:~ $ sudo pip3 install pyserial
```

Type "sudo pip3 install pyserial" and press Enter.

CULTIVATION SYSTEM
DEVELOPMENT PH.4 COURSE
4. APPENDIX

Issue Date: First edition published 1st November 2021

Author: Dr. KAGA, Yoshitaka

Publishing company: Neo Career Promote CO., LTD.

Address: 5-1-11-202, Okusawa Setagaya-ku TOKYO 158-0083 JAPAN

Home Page: <https://www.ncp-8.com/>

Contact E-mail: info@ncp-8.com